

## TECHNICAL GUIDE - CHANGING THE TEMPERATURE



To enter the menu push "MENU" X 1



When "°C.r 1" is displayed, push "+" or "-" to adjust the temp. to 50°C



Push "MENU" X 2 to adjust the hysteresis.  
When "HY.r 1" is displayed, push "+" or "-" to adjust the hysteresis to 2



Push "MENU" X 3 to set the fan function.  
When "Fn.r 1" is displayed, push "+" to select Heat.



Push "MENU" X 4 to input bank 2 temp.  
When "°C.r 2" is displayed, push "+" or "-" to adjust the temp. to 50°C



Continued on Page 2



VISIT OUR WEBSITE TO WATCH THE VIDEO!




## TECHNICAL GUIDE - CHANGING THE TEMPERATURE





Push "MENU" X 5 to adjust bank 2 hysteresis.  
When "HY.r 2" is displayed, push "+" or "-" to adjust the hysteresis to 4

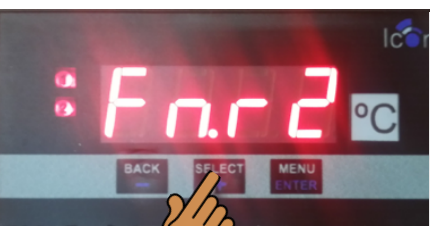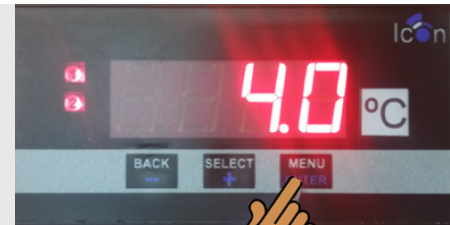


Push "MENU" X 6 to set the bank 2 fan function.  
When "Fn.r 2" is displayed, push "+" to select Heat

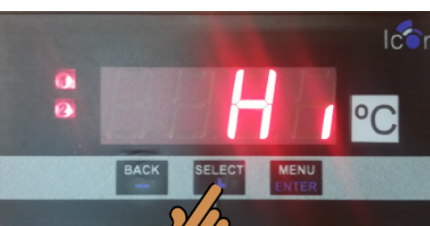



Push "MENU" X 7 to set the high point.  
When "Hi" is displayed, push "+" or "-" to adjust the set point

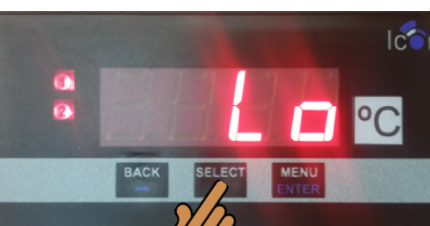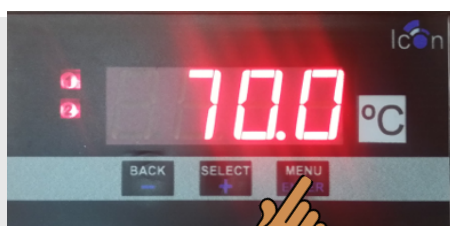

Push "MENU" X 8 to set the low point.  
When "Lo" is displayed, push "+" or "-" to adjust the set point

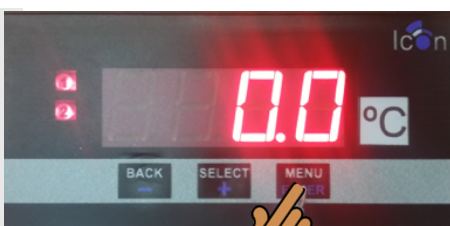

Push "MENU" X 9 to set the offset.  
When "OFSt" is displayed, push "+" or "-" to adjust the off set to 0

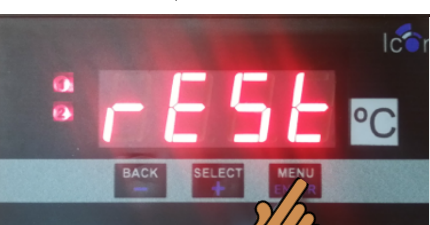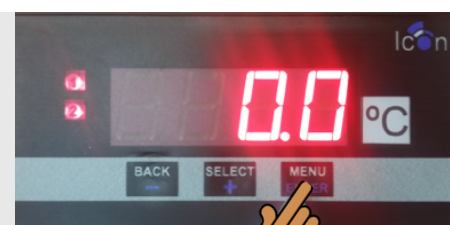

Push "MENU" X 10 to reset the controller.  
**!DO NOT DO THIS!**  
Push "MENU" to exit.

